

StongThumb

"Improvz your Gardz, Improvz your life"

Installation Guide

Install requirements:

Tape Measure

Foam Tape

2 inch Sheet rock screws or wood screws (2-4)

Filter (fiberglass for lights, MERV8 or better for fresh air in)

Saw or Razor Knife


Screw Driver

Metal tape

large Zip Ties (connect ducting)



1) cut hole based on the filter size opening of your box. (Remember "measure Twice, cut Once")

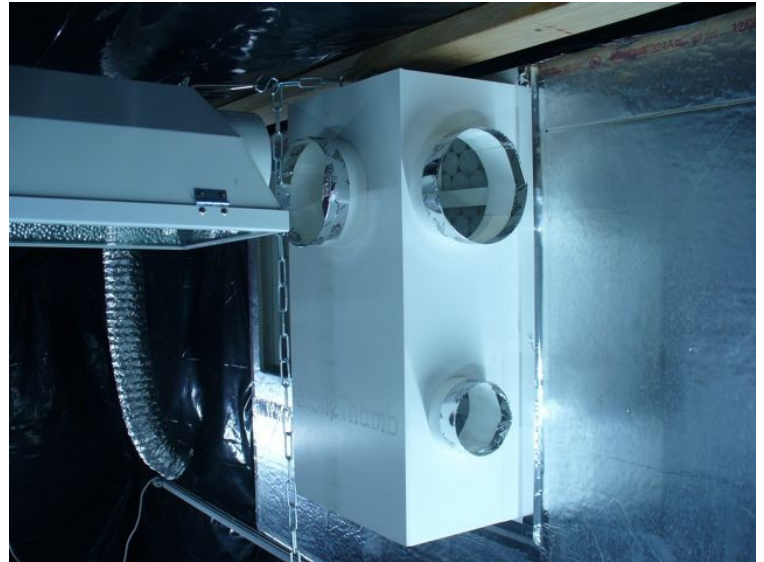

2) apply the foam tape to the outside edge on the mount side of your filter. This creates a better seal once on the wall.

Place box over opening and screw in place. Make sure there is something solid to attach it to!!!

Apply metal tape to all 4 edges to finish the filter to opening seal



3) Connect your ducting to the filter box (distributor). We recommend using Zip ties to hold the ducting to the filter box. They are cheaper than hose clamps and work great with our boxes.



4) Connect your ducting to your output (collector). Turn the system on and check your install. That's it, You're Done.

Remember to change your filter when you change your room